
Computation Waveform Viewer


The Viewer function (with the computation function) of the WE7000 Control Software has been modified to run as an independent software program for offline analysis.

This allows you to perform tasks efficiently such as when analyzing measured data collectively at a later time.

■ Display, compute, and analyze waveforms of the data of the WE7000 or DL Series on your PC

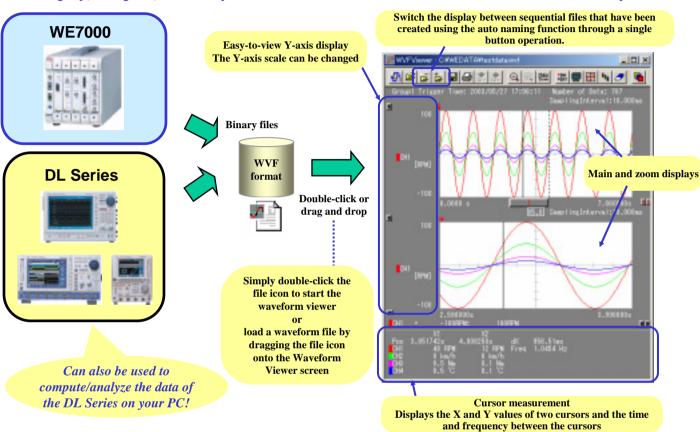


- **Equipped** with extensive computation function
- Register arbitrary equations in up to 10 channels

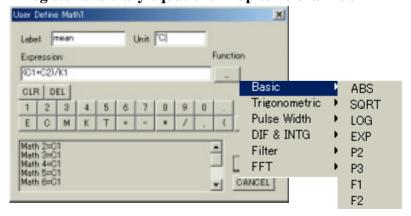

In addition to the four arithmetic operations, you can enter various equations freely using up to 63 characters and register the equations in up to 10 channels.

• Waveform parameter measurements

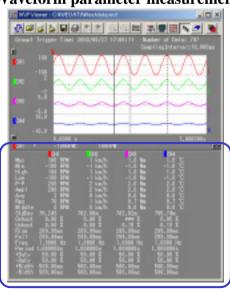

Equipped with waveform parameter measurements (20 types total) similar to those for the DL Series.

■ Specifications

Computation specifications:

Number of computation display channels: Up to 10 channels Computation types: User-defined computation (using up to 63

characters)

(See the list of operators for the computation types.)

Constants: 10 (K1 to K10) Waveform parameter measurements: 20 items

Measures the waveform between cursors.

Number of FFT points: 1000, 2000, or 10000 points Rect, Hanning, and Flattop FFT window functions: Averaging: Exp, Linear, and Peak Hold Digital filter: Lowpass, Highpass, and Bandpass

Filter characteristics: Gauss, Sharp, and IIR Cutoff frequency: 2 to 30% of the sampling

frequency during measurement

Other functions:

Loadable file formats: Waveform format (.wvf extension)1 and CSV format TY display (time series display) and XY display Display format:

Number of displayed waveforms: Up to 90 channels for TY display and up to

4 channels for XY display

Data storage: Waveform format (.wvf extension), CSV format,

waveform parameter values (CSV), and images (.bmp

extension)

Others: Cursor measurement

Main and zoom displays

Channel grouping display (up to 10 groups)

Display scale setting

Save display conditions to a file

Automatically start Excel when saving data in

CSV format. Online help

Models applicable for loading .wvf files:¹

• WE7000

• DL708, DL708E, DL716, and DL750

• DL1700 Series

DI 1600 Series

DL1500 Series

DL7100 and DL7200

DL7400 Series

1 The only binary files that can be loaded are those with .wvf extension. The program cannot handle data that has been recorded in real-time using the DL Series (.rtm extension) or files with other extensions.

PC system requirements:

(Same as those for the WE7000 Control Software)

Microsoft Windows 95/98/Me/XP, Windows NT 4.0, or

2000 Pro

IE4 or later installed.

Free disk space: 20 MB or more

CPU: Pentium II 400 MHz or equivalent or faster

128 MB and greater than or equal to the following size. Memory:

Required memory size (bytes) = 10 MB + the number of data points × 4 bytes × (the number of channels + the

number of computation channels)

The maximum number of computation channels is 10.

■ Model

Model	Description
707714	Computation Waveform Viewer

The List of Operators

Operator	Description
General operators	
+,-,*,/	Four arithmetic
ABS	Absolute value
SQRT	Square root
LOG	Logarithmic
EXP	Exponential
P2,P3	Square, cube
SIN,COS,TAN ATAN	SIN, COS, and TAN functions
Differentiation and	Arc tangent of two waveforms (within $\pm\pi$)
Integration	
DIF,DDIF	Differentiation, 2nd order differentiation
INTG,IINTG	Integration, 2nd order integration
• FFT	Book in the control of the Book of the control of
LS-REAL,LS-IMAG	Real, imaginary part of the linear spectrum Mag., log mag. of the linear spectrum
LS-MAG,LS-LOGMAG LS-PAHASE	Phase of the linear spectrum
RS-MAG,RS-LOGMAG	Mag., log mag. of the rms spectrum
PS-MAG,PS-LOGMAG	Mag., log mag. of the power spectrum
PSD-MAG,PSD-LOGMAG	Mag., log mag. of the power spectrum density
CS-REAL,CS-IMAG	Real, imaginary part of the two specified
CS MAC CS LOCATAC	waveform's cross spectrum Mag., log mag. of the two specified waveform's
CS-MAG,CS-LOGMAG	cross spectrum
CS-PHASE	Phase of the two specified waveform's cross
	spectrum
TF-REAL,TF-IMAG	Real, imaginary part of the two specified
	waveform's transfer function
TF-MAG,TF-LOGMAG	Mag., log mag. of the two specified waveform's transfer function
TF-PHASE	Phase of the two specified waveform's transfer
1111102	function
CH-MAG	Mag. of the two specified waveform's coherence
	function
Filter FILT1,FILT2	Filter 1, filter 2
Moving average	Tiller 1, liller 2
MEAN	Moving average
Pulse width	
computation	
PWHH,PWHL	Pulse width computation ↑↑, ↑↓
PWLL,PWLH PWXX	Pulse width computation ↓↓, ↓↑ Pulse width computation ↑↓ to ↑↓
• Others	ruise width computation \$\psi\$ to \$\psi\$
BIN	Binary computation
PH	Phase between two waveforms
F1,F2	v[cri+czi] , v[cri-czi]
HLBT	Hilbert function Constants
K1 to K10	Constants
Waveform parameters	
Maximum	Maximum value
Minimum	Minimum value
High level	High value
High level Low level	High value Low value
High level	High value
High level Low level Peak to peak value Amplitude Average	High value Low value P-P value (Max – Min) Amplitude Average value
High level Low level Peak to peak value Amplitude Average RMS	High value Low value P-P value (Max – Min) Amplitude Average value RMS value
High level Low level Peak to peak value Amplitude Average RMS Middle	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation	High value Low value P-P value (Max – Min) Amplitude Average value RMS value
High level Low level Peak to peak value Amplitude Average RMS Middle	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation Overshoot Undershoot Rise time	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation Overshoot Undershoot Rise time
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation Overshoot Undershoot Rise time Fall time	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation Overshoot Undershoot Rise time Fall time
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation Overshoot Undershoot Rise time Fall time Frequency	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation Overshoot Undershoot Rise time Fall time Frequency
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period Plus duty	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period Duty ratio (positive side)
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period
High level Low level Peak to peak value Amplitude Average RMS Middle Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period Plus duty Minus duty	High value Low value P-P value (Max – Min) Amplitude Average value RMS value Middle value of the amplitude Standard deviation Overshoot Undershoot Rise time Fall time Frequency Period Duty ratio (positive side) Duty ratio (negative side)

Microsoft, Windows, and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.



YOKOGAWA ELECTRIC CORPORATION

Measurement Sales Dept./Phone: 81-422-52-6614, Fax: 81-422-52-6624 Network Solutions Sales Dept/Phone: 81-422-52-6765, Fax: 81-422-52-6793

YOKOGAWA EUROPE B.V.

YOKOGAWA CORPORATION OF AMERICA Phone: 1-770-253-7000, Fax: 1-770-251-2088 Phone: 31-33-4622142, Fax: 31-33-4641616 YOKOGAWA ENGINEERING ASIA PTE. LTD Phone: 65-2419933, Fax: 65-2412606