

- 0.01 μHz to 30 MHz, 20 Vp-p, 1 or 2 channels
- Intuitive operation with a 3.5" LCD screen
- Synchronize up to 6 units to provide up to 12 output channels
- A variety of sweeps and modulations

## How can you replicate real world signals? Precisely

FG400 Series
Arbitrary/Function Generator



#### nbn Elektronik AG

Birmensdorferstrasse 30 CH-8142 Uitikon

Tel. +41 (0)44 404 34 34 Fax +41 (0)44 493 50 32 sales@nbn-elektronik.ch Features and

## benefits

#### Easily generate basic, application specific and arbitrary waveforms.


The FG400 Arbitrary/Function Generator provides a wide variety of waveforms as standard and generates signals simply and easily.


There are one channel (FG410) and two channel (FG420) models. As the output channels are isolated, an FG400 can also be used in the development of floating circuits. (up to 42 V)

#### Basic waveforms


# Sine DC 0.01 µHz to 30 MHz 5quare

## O.01 µHz to 15 MHz, variable duty

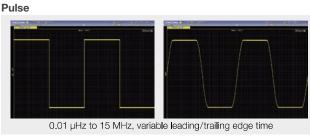

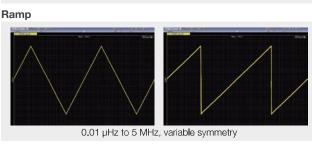


#### Advanced functions

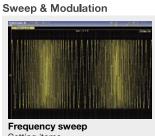


Setting items start/stop frequency, time, mode (continuous, single, gated single), function (one-way/shuttle, linear/ log)



PWM
Setting items
carrier duty, peak duty deviation
Output duty
the range of carrier duty ±peak
duty deviation

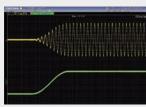

AM
Setting items
carrier amplitude, modulation depth
Output amp.
the range of amp./2 x (1 ±mod.
Depth/100)

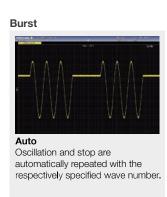



Oscillation with the specified wave number is done each time a trigger is received.



Oscillation is done in integer cycles or half cycles while the gate is on.

2

#### For trouble shooting

Arbitrary waveforms (16 bits amplitude resolution) of up to 512 K words per waveform can be generated. 128 waveforms with a total size of 4 M words can be saved to the internal non-volatile memory. Waveforms can be selected from the displayed list.


Waveforms can be created in the FG400 or with the editor software.



The list of arbitrary waveforms



Editing screen of the editor Editing screen in the FG400 software

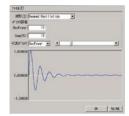

#### Acquire signal noise in the field, and then recreate it in the lab

The FG400 can generate signals as arbitrary waveforms that have been acquired by measuring instruments. Trouble shooting is made easier as the FG400 can generate waveforms that are difficult to reproduce. For example noise that only occurs on site. With the XviewerLITE software (freeware), waveform (binary data) that is acquired using a YOKOGAWA DL850E or DLM4000 can be analyzed on the PC to find the abnormal waveform. This abnormal part can then be clipped, saved and generated using the FG400.

#### [Application]

#### Clipping the abnormal signal, then adding it to the normal signal

Connect the clipped abnormal signal output of channel 2 to the additional input terminal of channel 1, and then press the Manual trigger key. The abnormal signal is added to the normal pulse waveform that is set on channel 1.








Features and benefits FG400 Series

## Features and benefits

#### Application-specific waveforms are also standard

#### Parameter-Variable Waveforms

In some cases engineers need application-specific waveforms like those needed to evaluate the response characteristics of mechanical/ electrical circuits and to emulate power supply circuits. The FG400 provides 25 different types of waveform as standard. As the parameters of application-specific waveforms can be changed like those of basic waveforms, waveforms are quicker and easier to generate.

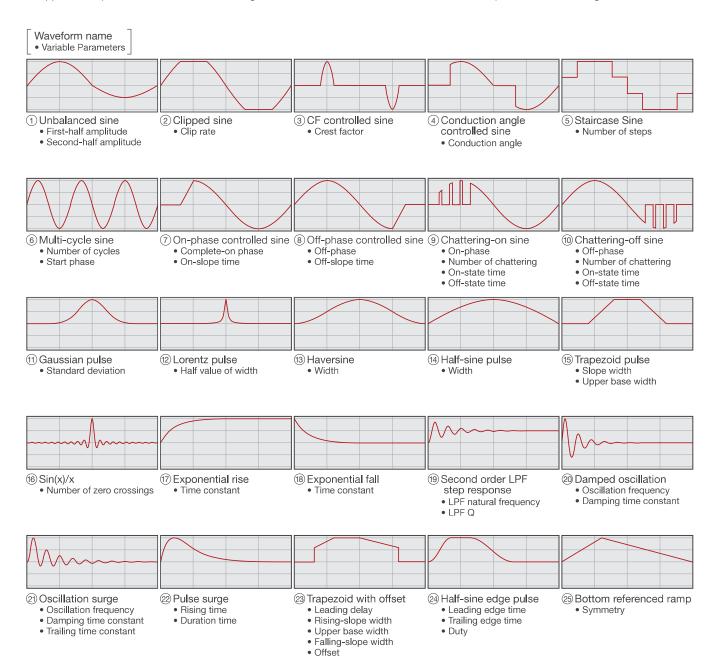


#### 5 Manually program waveform patterns

#### Sequence function

Sequences of different waveform patterns can be generated by programming the parameters. Complex sequences can be easily created using the "Sequence Edit Software".


Available parameters include: waveform, frequency, phase, amplitude, DC offset, square wave duty, step time, hold operation, jump destination, number of jumps, step stop phase, branch operation, step termination control, step sync code output

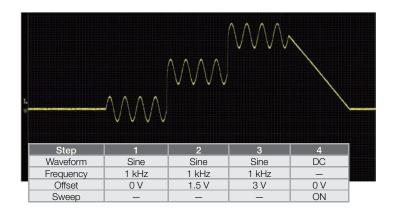

#### When 2 channels are linked (FG420 only)

In the FG420 the two output channels can be linked. In this mode, both output signals vary when either channel is adjusted.

- Independent: Independent setting
- 2- phase: Holds the same frequency
- Constant frequency difference: Holds the frequency difference as a constant value
- Constant frequency ratio: Holds the frequency ratio as a constant value
- Differential output: Same frequency, amplitude, and DC offset. Reverse phase waveform

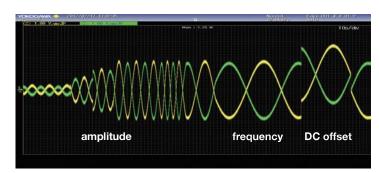


Example of the differential output

#### When you need more than 2 channels


By synchronizing multiple FG410 and FG420s, a generator of up to 12 phases (using six FG420s) can be created. The phase of each channel is synchronized to the master unit and can be individually adjusted.

#### Greater accuracy and stability

The FG400 has an external input terminal to increase frequency accuracy and stability by using a frequency reference with better accuracy than the built-in reference (for example, a rubidium frequency standard).

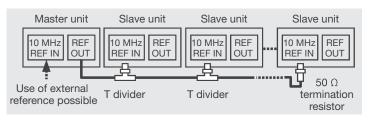

Connection method 1 (up to 6 units)

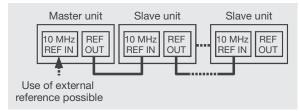

Connection method 2 (up to 4 units)

### Input/output terminal

#### FG410 (1 ch)





#### FG420 (2 ch)





#### CH1 I/O terminals

- 1 Waveform output
- 2 Sync/sub-output
- 3 external modulation/addition input
- 4 external trigger input

#### Common I/O terminals

- 5 External 10 MHz frequency reference input
- 6 Frequency reference output
- 7 Multi-I/O connector
- 8 GPIB connector
- 9 USB connector

#### CH2 I/O terminals

- 10 Waveform output
- 11 Sync/sub-output
- external modulation/addition input
- 13 external trigger input

#### Specification of FG400

Output impedance

 $50 \, \Omega$ , unbalanced

Number of channels	FG410: 1 char	nnel FG420: 2	2 channels	
Output waveforms	Sine, square, pulse, ramp, parameter-variable waveform, noise (Gaussian distribution), DC, arbitrary waveform			
Oscillation modes	Continuous, modulation, sweep, burst, sequence			
Frequency				
			Oscillation mode	
	Continuous, Swe (Continuous,	ер	Sweep (Gated Single-Shot), Burst	Sequence
Sine	0.01 µHz	to 30 MHz	0.01 µHz to10 MHz	0.01 µHz to10MHz
Square	0.01 µHz to 15 MHz		0.01 μHz to10 MHz	0.01 µHz to10MHz
Pulse	0.01 µHz to 15 MHz		0.01 µHz to10 MHz	not usable
Ramp	0.01 µHz to 5 MHz 0.01		0.01 µHz to 5 MHz <sup>-2</sup>	
Parameter-variable waveform	0.01 µHz to 5 MHz			0.01 µHz to 5 MHz <sup>-2</sup>
Noise	Fixed to 26 MHz equivalent bandwidth			
DC	Frequency setting invalid			
Arbitrary	0.01 μHz to 5 MHz			
Frequency setting resolution	0.01 µHz			
Frequency accuracy <sup>1</sup>	±(3 ppm of setting + 2 pHz), Aging rate*1 ±1 ppm/year			
Phase setting range	-1800.000° to +1800.000°			
Output Characteristics				
Amplitude	Setting range	0 Vp-p to 20 AC+DC ≤ ±1	Vp-p/open, 0 Vp-p to 10 Vp 0 V/open	-p/50 Ω
	Setting resolution	999.9 mVp-p or lower 4 digits or 0.1 mVp-p 1 Vp-p or higher 5 digits or 1 mVp-p		
	Accuracy'1'4 ±(1% of amplitude setting [Vp-p] + 2 mVp-p)/open			
	Setting units	Vp-p, Vpk, Vrms, dBV, dBm		
	Resolution	Resolution Approx. 14 bits (36 mVp-p/open or higher)		
DC offset	Setting range	Setting range ±10 V/open, ±5 V/50 Ω		
	Resolution	Resolution ±499.9 mV or lower 4 digits or 0.1 mV ±0.5 V or higher 5 digits or 1 mV		
	Accuracy*1	uracy' ±( 1% of DC offset setting [V] +5 mV + 0.5% of amplitude setting [Vp-p])/open (Sine, 10 MHz or lower, 20°C to 30 °C)		

			al modulation signal: -3 V to	o +3 V/open +3 V/open		
		Sweep	o x arive: 0 v to	+3 V/Open		
Sine wave	9					
Amplitude frequency characteristics*1		100 kHz or lower: ±0.1 dB 100 kHz to 5 MHz: ±0.15 dB 5 MHz to 20 MHz: ±0.3 dB 5 MHz to 30 MHz: ±0.5 dB (±0.8 dB at 2.8 Vp-p/50 Ω or higher) (50 mVp-p to 10 Vp-p/50 Ω, reference frequency 1 kHz)				
Total harmonic distortion <sup>11</sup>		10 Hz to 20 kHz: 0.2% or less (0.5 Vp-p to 10 Vp-p/50 Ω)				
Harmoni	c spurious*1		0.5 Vp-p to 2 Vp-p/50 Ω	2 Vp-p to 10 Vp-p/50 Ω		
		1 MHz or lower	–60 dBc or lower	–60 dBc or lower		
		1 MHz to 10 MHz	-50 dBc or lower	–43 dBc or lower		
		10 MHz to 30 MHz	-40 dBc or lower	-30 dBc or lower		
Non-harmonic spurious <sup>*1</sup>		1 MHz or lower -60 dBc or lower 1 MHz to 10 MHz -50 dBc or lower 10 MHz to 30 MHz -45 dBc or lower (0.5 Vp-p to 10 Vp-p/50 Ω)				
Square w						
Duty	Normal range	0.0100% to 99.9900% Upper limit (%): 100 – frequency (Hz) / 300,000 Lower limit (%): frequency (Hz) / 300,000 Jitter: 300 ps rms or less typ.				
	Extended range	0.0000% to 100.00009 Jitter: 2.5 ns	% rms or less typ.			
Rising/fa	lling time"	17 ns or less				
Overshoo		5% or less typ.				
Pulse wid	dth	Duty setting range: Time setting range:	0.0170% to 99.9830% 25.50 ns to 99.9830 Ms			
Leading trailing e	edge time, dge time	Setting range  Minimum setting value	15.0 ns to 58.8 Ms (3 dig Leading/trailing edge time Largest of either 0.01% o	independently settable		
Overshoot		5% or less typ.				
Jitter 500 ps rms or less ty		500 ps rms or less typ.	(10 kHz or higher) 2.5 ns	rms or less typ. (under 10 kHz)		
Ramp wa						
Symmetr	y setting range	0.00% to 100.00%				

Waveform group	veform Waveform name		
Steady sine group	Unbalanced sine, Clip Staircase sine, Multi-	oped sine, CF controlled sine, Conduction angle controlled sine cycle sine	
Transient sine group	On-phase controlled sine, Off-phase controlled sine, Chatteringon sine, Chatteringoff sine		
Pulse group	Gaussian pulse, Lore	ntz pulse, Haversine, Half-sine pulse, Trapezoid pulse, Sin(x)/x	
Transient response		onential fall, Second order LPF step response,	
group	Damped oscillation		
Other waveform group	Oscillation surge, Puls Trapezoid with offset,	Half-sine edge pulse, Bottom referenced ramp	
Arbitrary waveform			
Waveform length		2°, n = 12 to 19) or 2 to 10,000 control points etween control points)	
Total waveform saving capacity	Up to 128 waveforms	s or 4 M words (combined total for channels 1 and 2) saved to	
Amplitude resolution	16 bits		
Sampling rate	120 MS/s		
Modulation			
Type FM	Carrier waveform: Peak deviation:	Standard waveform other than noise, pulse wave and DC, an arbitrary waveform 0.00 µHz to less than 15 MHz	
FSK	Carrier waveform:	Standard waveform other than noise, pulse wave and DC, an arbitrary waveform	
	Hop frequency:	Within settable carrier waveform frequency range	
PM	Carrier waveform:	Standard waveform other than noise and DC, and arbitrary waveform	
DOL	Peak deviation:	0.000° to 180.000°	
PSK	Carrier waveform: Deviation:	Standard waveform other than noise and DC, and arbitrary waveform -1800.000° to +1800.000°	
AM	Carrier waveform: Modulation depth:	Standard waveform other than DC, and arbitrary waveform 0.0% to 100.0%	
DC offset	Carrier waveform:	Standard waveform and arbitrary waveform	
PWM	Peak deviation:	0 V to 10 Wopen	
PVVIVI	Carrier waveform: Peak deviation Square wave:	Square wave, pulse wave  Normal variable duty range 0.0000% to 49.9900%	
	Pulse wave:	Extended variable duty range 0.0000% to 50.0000% 0.0000% to 49.9000%	
Internal modulation waveform	Other than FSK, PSK	: Sine wave, square wave (50% duty),	
wavelomi	FOLK POLK	triangular wave (50% symmetry), rising ramp wave, falling ramp wave, noise, arbitrary wave	
Internal modulation	FSK, PSK: Other than FSK PSK	Square wave (50% duty)  : 0.1 mHz to 100 kHz (5 digits or 0.1 mHz)	
frequency	FSK. PSK:	0.1 mHz to 1 MHz (5 digits or 0.1 mHz)	
Sweep			
Sweep types		mplitude, DC offset, duty	
Sweep functions		eform shape), shuttle (triangular waveform shape) (selectable) y sweep only) (selectable)	
Sweep range setting	Start value and stop	value specification or Center value and span value specification	
Sweep time setting range	0.1 ms to 10,000 s (	4 digits or 0.1 ms)	
Sweep mode		hot, gated single-shot (selectable)	
Trigger source	During gated single- Internal, external (sel	shot, oscillation occurs only during sweep execution	
Internal trigger oscillator		100.0 µs to 10,000 s (5 digits or 0.1 µs)	
Stop level setting		level while oscillation is stopped during gated single-shot swe	
Sweep I/O		00% to +100.00% of amplitude full scale or off output, Sweep X drive output, Sweep external control input,	
Choop in C	Sweep external trigg		
Burst			
Burst mode	Auto burst, Trigger b Triggered gate (Gate	urst, Gate, oscillation switched on/off by gate upon trigger)	
Number of Mark/Space		9.5 cycles, in 0.5-cycle units	
Oscillation stop unit during gate	1 cycle, 0.5 cycles (s	electable)	
Phase setting range	-1800.000° to +180	0.000°	
Stop level Specification of signal level when oscillation is stopped.		al level when oscillation is stopped.	
	Sotting range:		
		0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop	
Stop level	-100.00% to +10 When the stop lengths.	0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop	
	-100.00% to +10 When the stop lengths.	0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible	
Stop level  Trigger source	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1,000 s (5 0.00 µs to 100.00 s	0.00% of amplitude full scale or off rel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) 15 digits or 0.01 µs)	
Stop level  Trigger source Internal trigger oscillator	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 μs to 1,000 s (5 0.00 μs to 100.00 s. Latent delay of 0.55	0.00% of amplitude full scale or off wel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) (6 digits or 0.01 µs) µs, Only valid for trigger burst	
Stop level  Trigger source Internal trigger oscillator Trigger delay	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 μs to 1,000 s (5 0.00 μs to 100.00 s. Latent delay of 0.55	0.00% of amplitude full scale or off rel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) 15 digits or 0.01 µs)	
Stop level  Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 μs to 1,000 s (5 0.00 μs to 100.00 s. Latent delay of 0.55 TTL level Input impedance 10	0.00% of amplitude full scale or off wel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) (6 digits or 0.01 µs) µs, Only valid for trigger burst	
Stop level  Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger  Sequence Step control	-100.00% to +10 When the stop lephase. Internal, external (sel 1.0 μs to 1.000 s (δ 0.00 μs to 100.00 s. Latent delay of 0.55 TTL level Input impedance 10 Panel key operation	0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) [5 digits or 0.01 µs) µs. Only valid for trigger burst kQ (pulled up to +3.3 V), unbalanced ation, jump destination, number of jumps, step stop phase,	
Trigger source Internal trigger oscillator Trigger delay External trigger input Manual trigger Sequence Step control parameters	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1.000 s (6 0.00 µs to 100.00 s Latent delay of 0.55 TTL level Input impedance 10 Panel key operation Step time, hold oper branch operation, ste	0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 μs) (5 digits or 0.01 μs) μs. Only valid for trigger burst  kΩ (pulled up to +3.3 V), unbalanced ation, jump destination, number of jumps, step stop phase, ap termination control, step sync code output	
Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger Sequence Step control parameters Intra-step channel parameters	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1,000 s (5: 0.00 µs to 100.00 s. Latent delay of 0.55 TTL level Input impedance 10 Panel key operation Step time, hold oper branch operation, str	0.00% of amplitude full scale or off rel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 μs) (5 digits or 0.01 μs) μs, Only valid for trigger burst kΩ (pulled up to +3.3 V), unbalanced etion, jump destination, number of jumps, step stop phase, ep termination control, step sync code output γ, phase, amplitude, DC offset, square wave duty	
Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger  Sequence  Step control parameters Intra-step channel	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1.000 s (5- 0.00 µs to 10.00 s (5- TL level Input impedance 10 Panel key operation Step time, hold oper branch operation, str Waveform, frequency	0.00% of amplitude full scale or off rel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 μs) (5 digits or 0.01 μs) μs. Only valid for trigger burst kΩ (pulled up to +3.3 V), unbalanced  ation, jump destination, number of jumps, step stop phase, ap termination control, step sync code output μ, phase, amplitude, DC offset, square wave duty wave, noise, DC, and arbitrary wave trameter-variable waveform can be used through saving as	
Trigger source Internal trigger oscillator Trigger delay External trigger input Manual trigger Sequence Step control parameters Intra-step channel parameters Usable waveforms Maximum number of	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1.000 s (sel 0.00 µs to 100.00 s Latent delay of 0.55 TTL level Input impedance 10 Panel key operation Step time, hold oper branch operation, str Waveform, frequency - Sine wave, square	0.00% of amplitude full scale or off rel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 μs) (5 digits or 0.01 μs) μs. Only valid for trigger burst kΩ (pulled up to +3.3 V), unbalanced  ation, jump destination, number of jumps, step stop phase, ap termination control, step sync code output μ, phase, amplitude, DC offset, square wave duty wave, noise, DC, and arbitrary wave trameter-variable waveform can be used through saving as	
Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger Sequence Step control parameters Intra-step channel parameters Usable waveforms	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1.000 s (6 0.00 µs to 10.00 s (6 0.00 µs to 10.00 s (6 1.0 µs to 10.00 s (7 1.0 µ	0.00% of amplitude full scale or off rel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 μs) (5 digits or 0.01 μs) μs. Only valid for trigger burst kΩ (pulled up to +3.3 V), unbalanced  ation, jump destination, number of jumps, step stop phase, ap termination control, step sync code output μ, phase, amplitude, DC offset, square wave duty wave, noise, DC, and arbitrary wave trameter-variable waveform can be used through saving as	
Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger Sequence Step control parameters Intra-step channel parameters Usable waveforms  Maximum number of usable waveforms  Number of saved sequences	-100.00% to +10 phase.  Internal, external (sel 1.0 μs to 1.000 s (δ 1.0 0.00 μs to 1.00.00 s). Latent delay of 0.55 TTL level Input impedance 10 Panel key operation  Step time, hold oper branch operation, str. Waveform, frequency - Sine wave, square - Ramp wave and peratibitary waveforms 128	0.00% of amplitude full scale or off rel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) [5 digits or 0.01 µs) [µs, Only valid for trigger burst  kΩ (pulled up to +3.3 V), unballanced  attion, jump destination, number of jumps, step stop phase, pp termination control, step sync code output [γ, phase, amplitude, DC offset, square wave duty wave, noise, DC, and arbitrary wave arameter-variable waveform can be used through saving as [s. ]	
Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger input  Sequence Step control parameters Intra-step channel parameters Usable waveforms  Maximum number of usable waveforms  Number of saved	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1.000 s (6 0.00 µs to 10.00 s (6 0.00 µs to 10.00 s (6 1.0 µs to 10.00 s (7 1.0 µ	0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) [5 digits or 0.01 µs) µs, Only valid for trigger burst  kQ (pulled up to +3.3 V), unbalanced  ation, jump destination, number of jumps, step stop phase, pp termination control, step sync code output // phase, amplitude, DC offset, square wave duty wave, noise, DC, and arbitrary wave rameter-variable waveform can be used through saving as 5. d to non-volatile memory) ps per sequence	
Trigger source Internal trigger oscillator Trigger delay External trigger input Manual trigger Sequence Step control parameters Intra-step channel parameters Usable waveforms Maximum number of usable waveforms Number of saved sequences Number of steps	-100.00% to +10 When the stop ler phase. Internal, external (sel 1.0 µs to 1.000 s (6 0.00 µs to 10.00 s (6 0.00 µs to 10.00 s (6 0.00 µs to 10.00 s (7 0.00 µs to 10.00 s (7 0.00 µs to 10.00 s (7 0.00 µs to 10.00 s (8 0.00 µs to 10.00 s (8 0.00 µs to 10.00 per pranch operation  Step time, hold oper pranch operation, str Waveform, frequency - Sine wave, square - Ramp wave and per arbitrary waveforms 128 10 sequences (saved Maximum of 255 ste 0.1 ms to 1,000 s (4	0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop ectable). Manual trigger possible digits or 0.1 µs) [5 digits or 0.01 µs) µs, Only valid for trigger burst kQ (pulled up to +3.3 V), unbalanced  ation, jump destination, number of jumps, step stop phase, pp termination control, step sync code output // phase, amplitude, DC offset, square wave duty wave, noise, DC, and arbitrary wave rameter-variable waveform can be used through saving as 5. d to non-volatile memory) ps per sequence	
Stop level  Trigger source Internal trigger oscillator Trigger delay  External trigger input  Manual trigger  Sequence  Step control parameters Intra-step channel parameters Usable waveforms  Maximum number of usable waveforms  Number of saved sequences Number of steps  Step time	-100.00% to +10 When the stop lephase. Internal, external (self to plase) 1.0 µs to 1.000 s (5 0.00 µs to 1.00.00 s to 1.00.00 µs to 1.00.00 s (5 0.00 µs to 1.00.00 s). TTL level Input impedance 10. Panel key operation  Step time, hold operbranch operation, str. Waveform, frequency - Sine wave, square - Ramp wave and parbitrary waveforms 128  10 sequences (savect Maximum of 255 ste 0.1 ms to 1,000 s (4 Constant, keep, lines 1 to 999 or infinite	0.00% of amplitude full scale or off vel is set to off, stop occurs at the set oscillation start/stop sectable). Manual trigger possible digits or 0.1 μs) (5 digits or 0.01 μs) (5 digits or 0.01 μs) μs. Only valid for trigger burst kΩ (pulled up to +3.3 V), unbalanced attion, jump destination, number of jumps, step stop phase, ap termination control, step sync code output (7, phase, amplitude, DC offset, square wave duty wave, noise, DC, and arbitrary wave arameter-variable waveform can be used through saving as 5.	

Upon branch input, branching to specified destination step

Branch operation

Channel modes	Independent, 2-phase (holds same frequency), Constant frequency difference, Constant frequency ratio, Differential output (Same frequency, amplitude, and DC offset. Reverse phase waveform.)		
Equivalent setting,	Set two channels at the same time.		
same operation Frequency difference setting range	0.00 µHz to less than 30 MHz (0.01 µHz resolution) CH2 frequency — CH1 frequency		
Frequency ratio N:M	1 to 9,999,999 (for each of N and M)		
Setting range Phase synchronization	N:M = CH2 frequency:CH1 frequency  Automatically executed during channel mode switching		
	<b>3</b> · · · · · · <b>3</b>		
Other functions  External 10 MHz frequency reference input	Voltage/waveform 0.5 Vp-p to 5 Vp-p, Sine wave or square wave		
Frequency reference output	for synchronizing multiple FG410, FG420 units.		
	Voltage/waveform 1 Vp-p/50 Ω square wave, 10 MHz		
External addition input	Function to add the external signal to the waveform output signal.  Addition gain		
	Voltage/waveform —1 V to +1 V, DC to 10 MHz (–3 dB)		
	Input impedance 10 kΩ, unbalanced		
Multi input/output	Used for sweep and sequence control.		
Synchronization of multiple units	Sync operation is possible. Up to 6 units can be connected with BNC cables in the form of master/slave connections, using the frequency reference output and externa 10 MHz frequency reference input.		
User-Defined Unit	Sets and displays the value in any unit, using a specified conversion expression.		
	Setting target Frequency, period, amplitude, DC offset, phase, and duty  Conversion [(Setting target value) + n] × m,		
	expression or $[\log_{10}$ (setting target value) $+$ n $] \times$ m Specification of conversion expression and values of n and		
	Unit character string Up to 4 characters		
Setting saving capacity	10 settings (saved to non-volatile memory)		
Interface	GPIB, USBTMC (SCPI-1999, IEEE-488.2)		
General Characteristics			
Display Input/output ground	<ul> <li>3.5 inch TFT color LCD</li> <li>The signal grounds for waveform output, sync/sub output and external modulation</li> </ul>		
	addition input are insulated from the housing. (42 Vpk max. These signal grounds are common within the same channel.)  - The signal ground for the external 10 MHz frequency reference input is insulated from the housing, (42 Vpk max.)  - Each signal ground for CH1, CH2 and external 10 MHz frequency reference input is independent.		
Power supply	AC 100 V to 230 V ±10% (250 V max.) 50 Hz/60 Hz ±2 Hz		
Power consumption	FG410 50 VA or less FG420 75 VA or less		
Operating temperature/ humidity range	0°C to +40°C, 5%RH to 85%RH (Absolute humidity of 1 g/m³ to 25 g/m³, no condensation)		
Weight	Approx. 2.1 kg (main unit excluding accessories)		
Dimensions	216 (W) × 88 (H) × 332 (D) mm (excluding protrusions)		
Sequence Editor			
Editing functions	Initializes, copies, pastes, inserts, and deletes steps Saves and reads sequence data to/from a file. Sequence can be edited without connecting the device.		
Displaying functions	Editing screen: Lists parameters for each step.		
Transferring functions	Sequence view screen: Graphs changes of up to five parameters.      Transfers and reads sequence data to/from the device.		
Device control functions	Transfers to the device the arbitrary waveform used in the sequence.		
Device control functions	Starts, stops and holds the sequence. Can monitor the execution status of sequence.		
Operating environment	Windows XP/7		
	USB Interface     NI-VISA from National Instruments USB driver (required)		
Arbitrary Waveform Edit Editing functions			
Eating functions	Generation (standard waveform and a mathematical expression) Interpolation (straight line, spline, and continuous spline) Math operation (addition, subtraction, multiplication, and division of waveform) Contraction and extension (vertical and horizontal directions) Cuts, copies, and pastes some part of waveform Undo function		
	Saves and reads arbitrary waveform data to/from a file.     Waveforms can be edited without connecting the device.		
Display functions	Vavelorms can be edited without connecting the device.      Zoom in/out		
.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Zoom in/out     Scroll     Display unit (coordinates) selectable     Cursor (A, B)		
Transfer function	Transfers and reads arbitrary waveform data to/from the device.		
Device control function  Operating environment	Major parameter setting     * Same as the operating environment for the Sequence Editor.		
XviewerLITE's Functions	Reads the waveform data. (WVF/WDF format)		
. 3.10.10.10	<ul> <li>Displays the waveform. (main, zoom, history and X-Y)</li> </ul>		
	Saves the waveform data to ascii and text.     Displays the waveform parameter value.		
	• Cursor		
Operating environment	Windows XP/Vista/7		

- Unless otherwise specified, the value assumes the following conditions: continuous oscillation, load of 50 Ω, DC offset setting of 0 V, auto range, waveform amplitude range of ±FS, external addition turned off; the AC voltage is rms value.
   \*1: Guaranteed numerical value. Other numerical values are nominal or typical (typ.) values.
   \*2: Used after converted into arbitrary waveform.
   \*3: It can be downloaded from the web site.
   \*4: Condition: 1 kHz sine, amplitude setting of 20 mVp-p/open or higher.


Model	Suffix Code	Description
FG410		Arbitrary/Function Generator: 1-Channel, 30 MHz
FG420		Arbitrary/Function Generator: 2-Channel, 30 MHz
Power cord	-D	UL/CSA standard, PSE
	-F	VDE standard
	-R	AS standard
	-Q	BS standard
	-H	GB standard
	-N	NBR standard


#### Standard Accessories;

Power cord (1 set), User's manuals and application software (1 set)

Model/ parts number	Product	Description
705928	Multi input/output cable	For sweep/sequence control
751537-E2	Rack mount kit	Inch rack mounting (for 1 unit)
751537-J2	Rack mount kit	Millimeter rack mounting (for 1 unit)
751538-E2	Rack mount kit	Inch rack mounting (for 2 units)
751538-J2	Rack mount kit	Millimeter rack mounting (for 2 units)



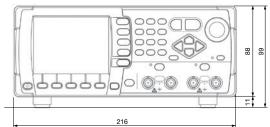

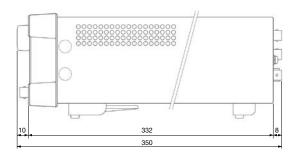

#### **Related Products**

#### ScopeCorder DL850E/DL850EV

- 17 types of plug-in modules (voltage, temperature, strain, acceleration, frequency, logic, CAN, LIN)
- High-speed (up to 100 MS/s), High resolution (up to 16-bit), Isolated (up to 1 kV)
- 128-CH voltage/temperature, 128-bit logic measurement



#### Mixed Signal Oscilloscope **DLM4000**

- 8 analog channels/7 analog channels + 8-bit logic
- 350 MHz, 500 MHz analog bandwidth
- Large 12.1-inch LCD display
- Long memory: Up to 125 M points



#### Mixed Signal Oscilloscope **DLM2000**

- Lightweight and compact
- 200 MHz, 350 MHz, 500 MHz analog
- 4 analog channels/3 analog channels + 8-bit logic
- Long memory: Up to 125 M points



#### Notice

- Before operating the product, read the user's manual thoroughly for proper and safe operation.
- If this product is for use with a system requiring safeguards that directly involve personnel safety, please contact the Yokogawa offices.

This is a Class A instrument based on Emission standards EN61326-1, and is designed for an industrial environment.

an industrial environment. Operation of this equipment in a residential area may cause radio interference, in which case users will be responsible for any interference which they cause.

Any company's names and product names mentioned in this document are trade names, trademarks or registered trademarks of their respective companies. The User's Manuals of this product are provided by CD-ROM.



#### nbn Elektronik AG

Birmensdorferstrasse 30 CH-8142 Uitikon

Tel. +41 (0)44 404 34 34 Fax +41 (0)44 493 50 32 sales@nbn-elektronik.ch

### OKOGAWA

YOKOGAWA METERS & INSTRUMENTS CORPORATION

Global Sales Dept. / Phone: +81-42-534-1413 Fax: +81-42-534-1426 Email: tm@cs.jp.yokogawa.com

http://tmi.yokogawa.com

YOKOGAWA CORPORATION OF AMERICA YOKOGAWA EUROPE B.V. YOKOGAWA ENGINEERING ASIA PTE. LTD. Phone: (1)-770-253-7000

Phone: (65)-62419933

Fax: (1)-770-254-0928

Phone: (31)-88-4641000 Fax: (31)-88-4641111 Fax: (65)-62412606

Subject to change without notice. ©2014, Yokogawa Meters & Instruments Corporation

(Ed:01/b) Printed in Japan, 403(KP)